

### Cautions



**ELECTRICAL HAZARD:** Disconnect power from equipment prior to making any internal adjustments. Service should only be performed by qualified personnel.

**FRAGILE:** Inspect the equipment prior to installation. Do not install the equipment if damage is apparent. Do not attempt to disassemble this equipment. If damaged, return to the supplier.

**ELECTROSTATIC HAZARD:** This is sensitive electronic equipment. Apply safe ant-static practices when handling this equipment.

**CIRCUIT LIMITATIONS:** The maximum number of detectors connected to a single detection zone is limited by the control and indicating equipment, and may be limited by local regulations.

### Introduction

HNA-360 analogue addressable heat detectors are microprocessor controlled state-of-the-art detectors suitable for connection to Numens 2-wire addressable fire detection control and indicating equipment.

These instructions provide trained installation personnel with details to install and commission HNA-360 heat detectors for optimum performance.

### Preparation

Before commencing installation, ensure all equipment and tools to mount and connect the equipment are available, such as drills, mounting screws, cables and ladders.

HNA-360 heat detectors can be installed with the following bases and accessories.

Description	Part number	Datasheet
4-terminal 102 mm low profile base	CN3023	31-0001
8-terminal 102 mm low profile base	CN3043	31-0001
Remote indicator <sup>a</sup>	681-001	31-0023

<sup>a</sup> Requires 8-terminal base.

### Installation

#### Base

The base can be mounted directly onto an electrical junction box such as an octagonal (75 mm, 90 mm or 100 mm), a round (75 mm), or a square (100 mm) box without using any type of mechanical adapter.

1. Feed the conductors through the middle of the base for termination to the base contacts.
2. Mount the base on the junction box or directly onto a flat surface.
3. Mount the base to the surface using fixing screws that are suitable to securely fix the base to the surface.

#### Wiring

Base terminals accept (0.4 ~ 2.5) mm<sup>2</sup> conductors.

1. Strip the conductor insulation to expose 5 mm of the conductor.
2. Connect the conductors to the base terminals as shown in Fig. 1.

**WARNING:** Take care to ensure the insulation does not get clamped by the terminal contact.

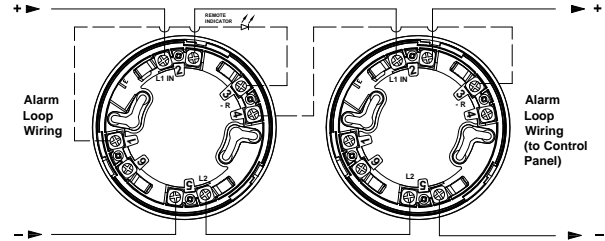


Fig. 1: Base wiring connections

Note 1: 8-terminal base required if a remote indicator is installed.

Note 2: If a remote indicator is not installed, the polarity of the zone circuit wiring may be reversed.

**WARNING:** Do not short-circuit terminals 2 and 5.

3. Check the wiring for continuity, short circuits and earth faults.

#### Detector

**WARNING:** Do not install the detector head until the area is thoroughly cleaned of construction debris, dust, etc.

1. Select the detector address and set the address as shown in Table 1 by adjusting the DIP switch setting located on the underside of the detector body.

Note: Addresses 0, 126 and 127 cannot be used.

2. Align the components as shown in Fig. 2.
3. Mate the detector head onto the base and rotate it clockwise to secure it. The home alignment mark should be aligned with the detector mark.

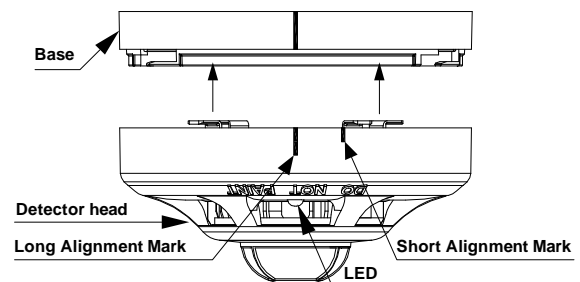


Fig. 2: Fitting the detector to the base

### Commissioning

#### Heat Detector

1. Ensure all the alarm signal services, releasing devices and extinguisher systems are disabled during the commissioning period.
2. Connect power to the detector for approximately 1 min. Check that the detector is recognized and in the quiescent condition at the control and indicating equipment. If the detector is not shown or shows in fault, check the wiring for the correct voltage and earth leakage. Replace the detector if necessary.
3. Subject the detector to a flow of warm air at a temperature of between 65 °C and 80 °C as follows (this requirement can be met by some domestic hair dryers).
  - a. Start the warm airflow and check that temperature is correct and stable.
  - b. From a distance of approximately 5 cm, direct the airflow at the guard protecting the thermistor for up to 30 s. The detector will signal an alarm by continuous illumination of the LED.
  - c. Upon alarm, immediately remove the heat source.
4. Reset the detector from the control and indicating equipment. Check that the detector LEDs are off and indicating equipment has returned to the quiescent condition.

#### Remote Indicator (where fitted)

Check that the indicator illuminates at the same time as the detector LEDs.



## Final Conditions

Ensure all the alarm signal services, releasing devices and extinguisher systems disabled for the commissioning are returned to their previous condition.

View the complete range of products at [www.numens.net](http://www.numens.net)



## References

Document	Description
31-0040	HNA-360 addressable heat detector datasheet

ON OFF

1 2 3 4 5 6 7 8

**Table 1 – DIP switch address settings**

		Most significant nibble							
		0000	1000	0100	1100	0010	1010	0110	1110
Least significant nibble	0000	— <sup>a</sup>	16	32	48	64	80	96	112
	1000	1	17	33	49	65	81	97	113
	0100	2	18	34	50	66	82	98	114
	1100	3	19	35	51	67	83	99	115
	0010	4	20	36	52	68	84	100	116
	1010	5	21	37	53	69	85	101	117
	0110	6	22	38	54	70	86	102	118
	1110	7	23	39	55	71	87	103	119
	0001	8	24	40	56	72	88	104	120
	1001	9	25	41	57	73	89	105	121
	0101	10	26	42	58	74	90	106	122
	1101	11	27	43	59	75	91	107	123
	0011	12	28	44	60	76	92	108	124
	1011	13	29	45	61	77	93	109	125
	0111	14	30	46	62	78	94	110	— <sup>a</sup>
	1111	15	31	47	63	79	95	111	— <sup>a</sup>

<sup>a</sup> Address not permitted.